FIG.1

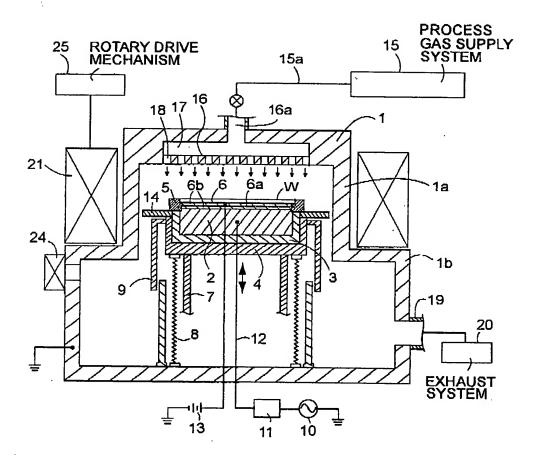


FIG.2

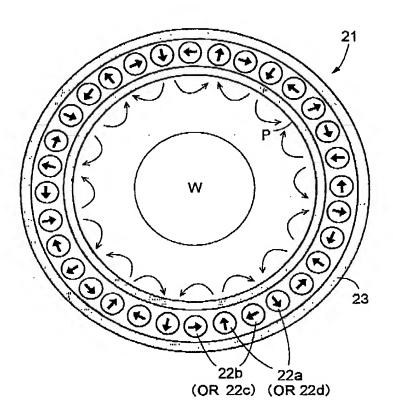


FIG. 3

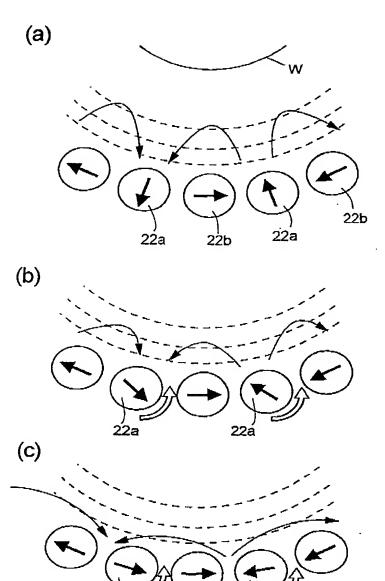


FIG. 4

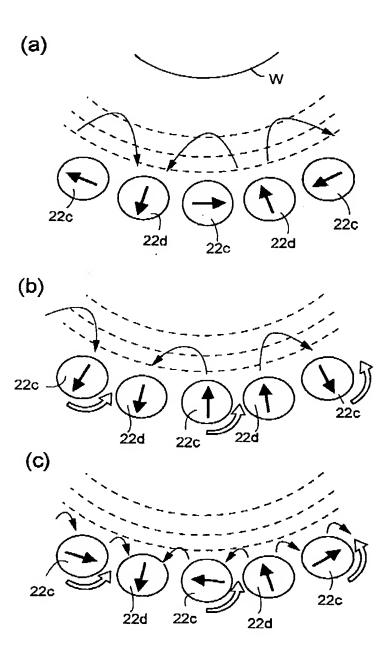


FIG. 5

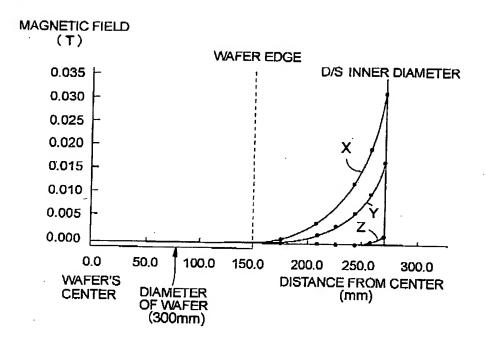


FIG. 6

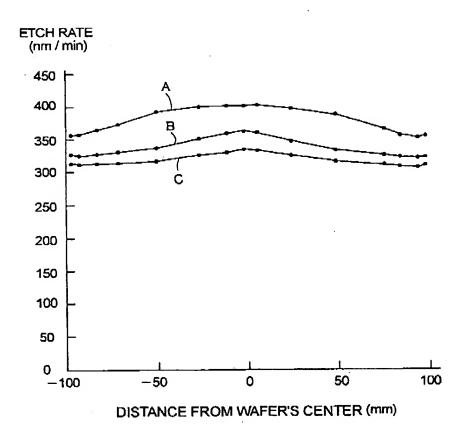


FIG. 7

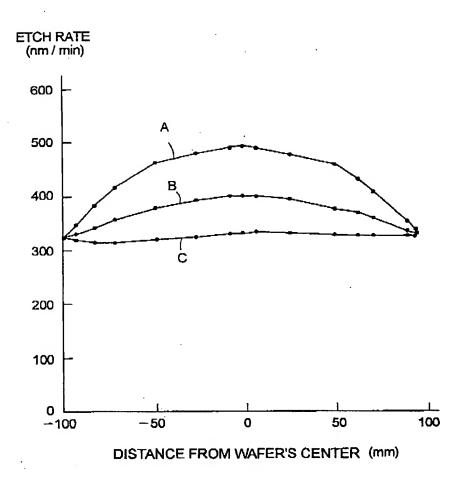


FIG. 8




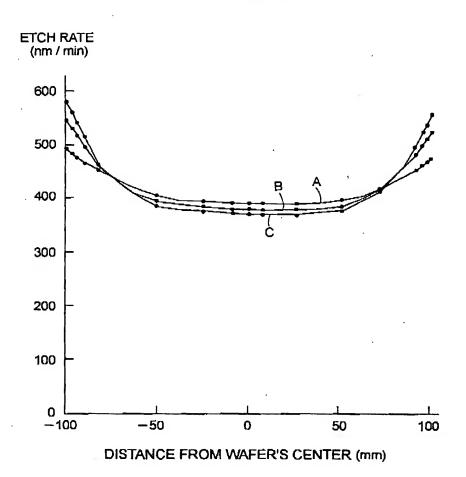


FIG. 9

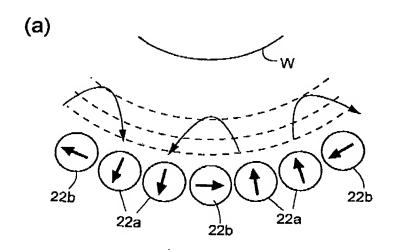

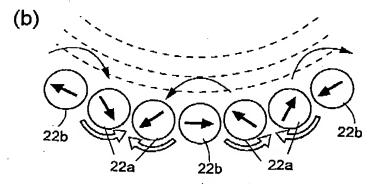

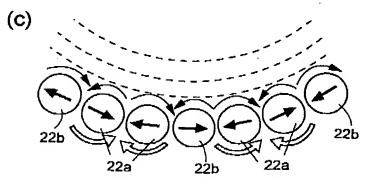

San Bar Miller

FIG. 10

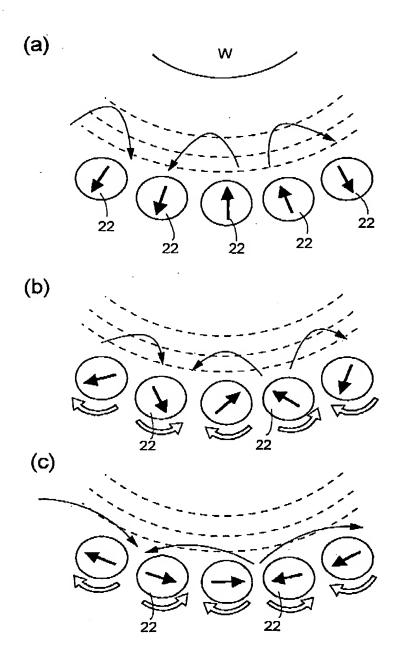
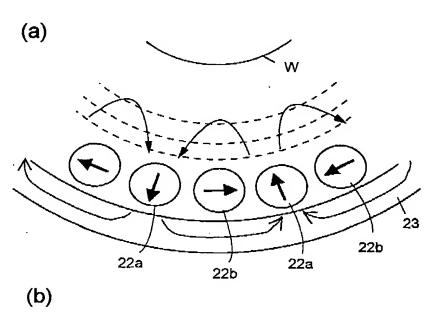


FIG. 11



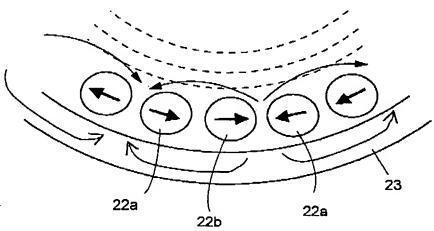
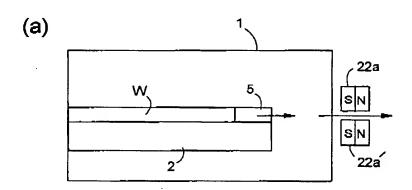


FIG. 12



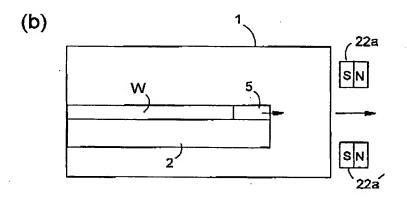


FIG. 13

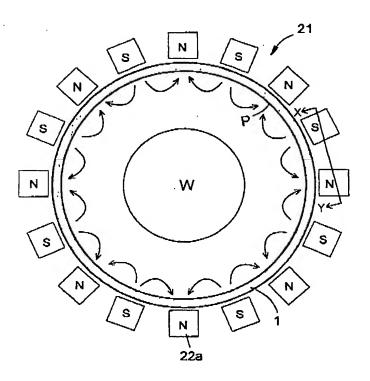


FIG. 14

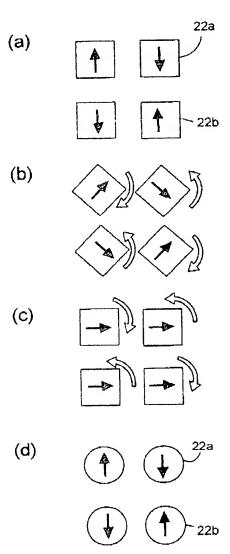
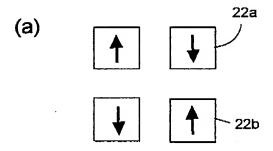
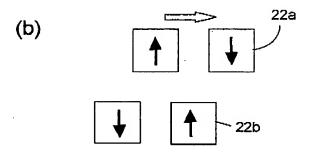


FIG. 15





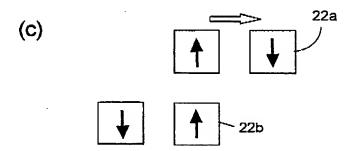
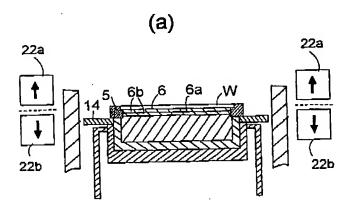


FIG. 16



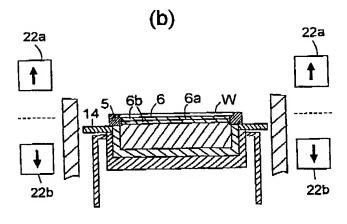


FIG. 17

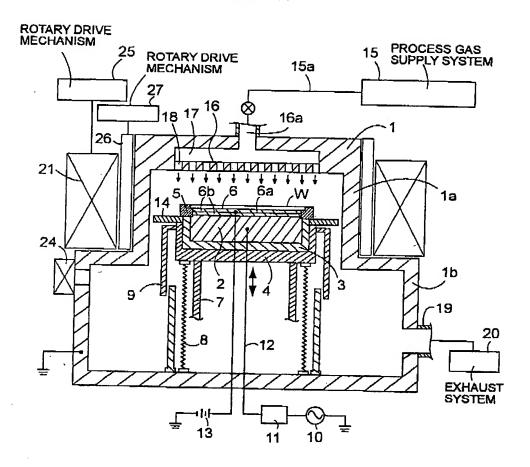


FIG. 18


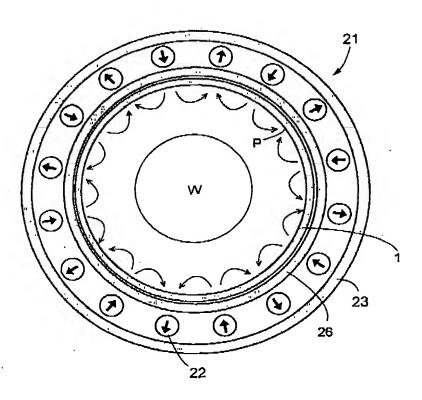


FIG. 19

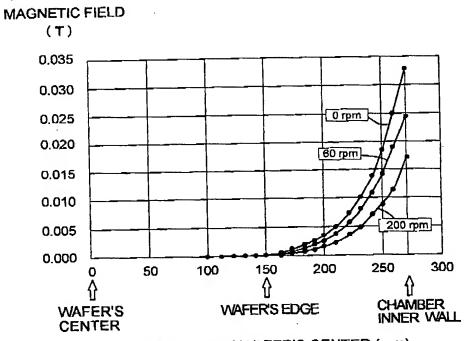

DISTANCE FROM WAFER'S CENTER (mm)

FIG. 20


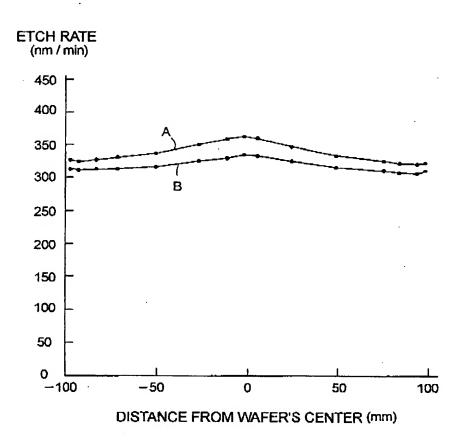


FIG. 21

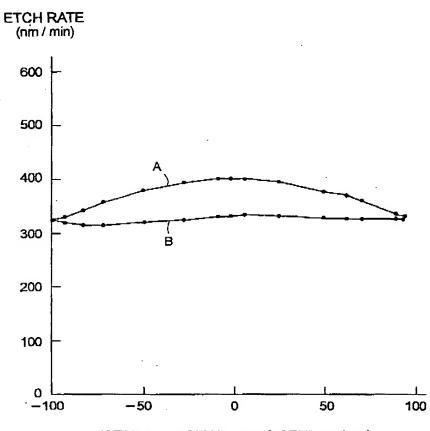

DISTANCE FROM WAFER'S CENTER (mm)

FIG. 22

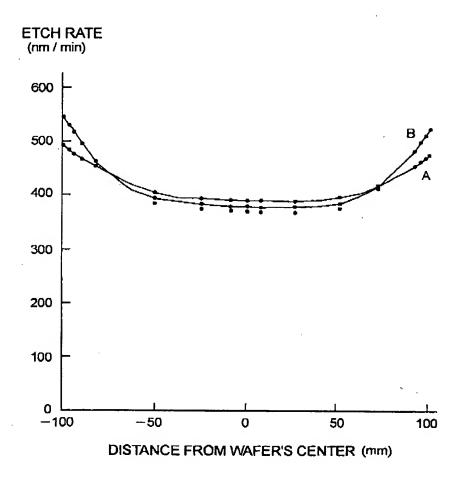


FIG. 23

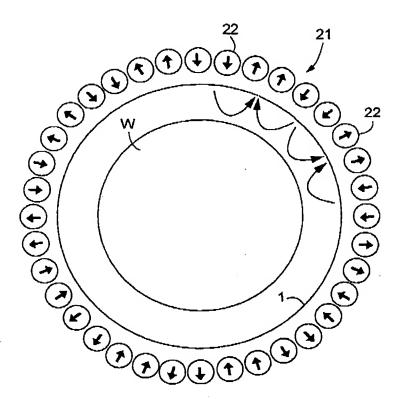


FIG. 24

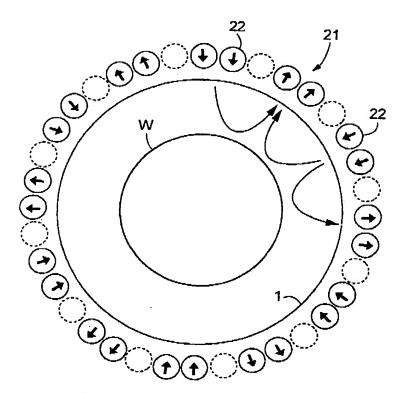


FIG. 25

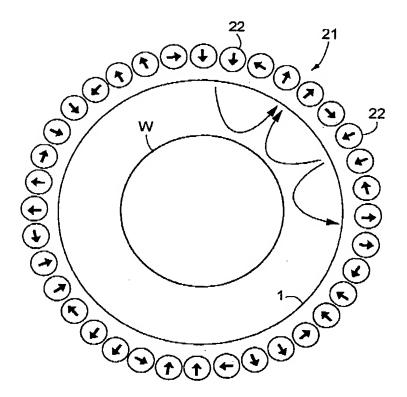


FIG. 26

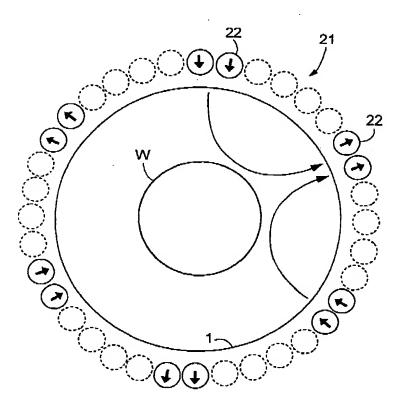


FIG. 27

